

# EUROSTYLE



## CARE GUIDE

### TAKING CARE OF YOUR EUROSTYLE PRODUCT

The following are recommended care tips to ensure the longest possible life of your EUROSTYLE quality cabinets. As a rule, treat them like any other quality furniture in your home.

### AFTER INSTALLATION

Make sure to remove protective film. A great deal of dust will accumulate during the installation of your cabinets. We recommend cleaning with a damp cloth and drying immediately after with a dry cloth. DO NOT use abrasive cleansers.

### CLEANING

For regular maintenance of your cabinets, use a damp cloth with liquid dish soap or mild soap in warm water, dry immediately with a soft, dry cloth. Do not use dishcloths or sponges; they may contain detergents and other residue that could harm the surface of your cabinets. DO NOT use abrasive cleansers or any ammonia or silicone base cleansers.

### SPILLS

Wipe up immediately any spills, food splatters and water accumulation. Pay special attention to areas near the sink, dishwasher and cooking surface. Unattended spills can soak through the top coat finish and eventually cause peeling and other damage.

### MELAMINE, THERMOFOIL AND METAL DOORS

Clean spills immediately using a damp soft cloth and dry off immediately. For oily and greasy stains, use a mild soap with warm water and dry thoroughly. DO NOT use any furniture polish, abrasive cleansers or paste wax on these doors.

### GLASS

Any commercial glass cleaner may be used. It is very important to spray the cleaner on the cloth or paper towel and not directly on the glass to avoid the cleaner dripping onto the door profile and causing damage.

### IMPORTANT:

- DO NOT use abrasive cleansers such as pads, steel wool or powder cleansers, as these products will damage the finish on your cabinets
- DO NOT leave wet cloths draping over cabinet doors and end panels.
- DO NOT attach towel racks to the back of cabinet doors.
- DO NOT dry dust, as particles can be abrasive and cause scratches over time.
- DO NOT use any agent containing silicone, ammonia or any paste wax.

### PREVENTION

- Avoid extreme variations in temperature and humidity in your kitchen. Temperature should be constant and humidity should be between 20% to 50%.
- Too much temperature variation or high humidity will cause the components of the cabinet to expand and contract, which will alter the finish of the cabinet.
- Self-cleaning ovens radiate a great deal of heat, especially if there are gasket leaks not properly sealed. We recommend that the adjacent doors and drawers be removed through the cleaning process. Our CLIP-ON hinges will make this operation easy.
- We also recommend you don't use any small appliances such as coffee makers, toasters and grills on a counter directly under wall cabinets. Excessive heat and moisture from these appliances will damage your cabinets. Thermofoil / Laminate doors peeling ARE NOT COVERED UNDER WARRANTY from damage due to heat or steam.
- It is recommended that your cabinets are not be exposed to direct sunlight. Direct sunlight will cause premature discoloration of your cabinets.
- Avoid washing the kitchen floor with a large amount of water; as water may run under cabinets toe-kick and cause damage and mildew build up.